

~ 1 ~

Steam Shower Manual

Model: FJ-2249



Important Safety Information

IMPORTANT

The following must be observed for safe and proper installation and operation. Professional installation is recommended; faulty electrical work may increase the risk of fire.

1. Always consult with a physician before using a steam shower.
2. Children should never use steam shower without adult supervision.
3. If you become dizzy, lightheaded or nauseas you should discontinue use immediately and consult a physician.

WARNING: Individuals who are intoxicated, or have been diagnosed with high blood pressure, or other heart problems should not use steam showers without prior medical consent.

Table of Contents

Notice.....	4
Features.....	5
Water & Electrical Connections	5
Installation	6

Notice

- Do not disconnect any hose or joints from the acrylic panels.
- All shower panel seams must be sealed with 100% silicone caulk
- Remove all protective plastic before assembly
- Tighten and reseal any and all loose fittings, jets and fixtures.
- All electrical work should be done in accordance with local safety standards.
- Water lines must be active before unit is powered up.

Features

- Luxurious Tempered Glass Enclosure
- Self-cleaning Steam Generator
- Body Massage Jets
- 2 Sets of Mist Jets
- 2 Rainfall Showerheads
- 2 Molded Seats
- Handheld Showerhead
- Aromatherapy Cup
- Computer Panel
- Quartz Light
- Circulation Fan
- Diverter
- Safety Grab Bar
- FM Radio / CD-MP3 connection
- Mirror
- Accessory Rack
- Foot Massage



Water and Electrical Connections



- To avoid scalding the incoming water temperature should never exceed 122° Fahrenheit.
- Water pressure must stay within the range of 30-70 PSI.
- 2 Hot/Cold shutoff valves with ½ male pipe threads are required (not included).
- 1-220 volt 20 amp GFCI breaker with internal neutral wire is required (10-2/ 12-2 gauge wire).

Installation



Required tools

- Crescent wrench
- #2 Philips head screw-driver (electric if possible)
- Strait head screw-driver
- Level
- Caulk gun with 100% silicone caulk
- Customer support—call 866-STEAM-61
- **It is recommended to use 100% silicone caulk to seal all joints between shower panels instead of adhesive tape**

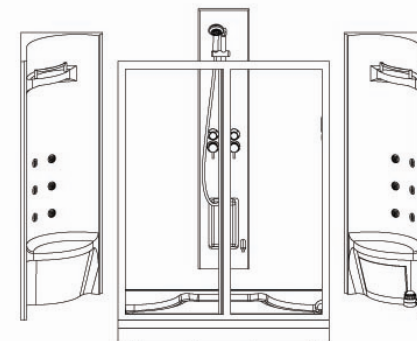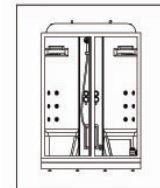


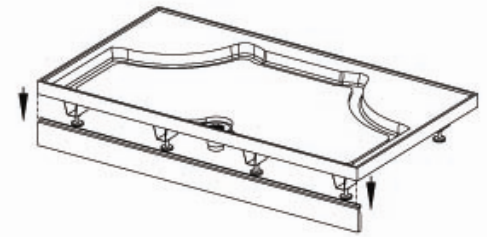
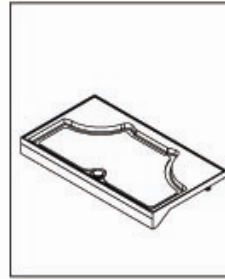


1. Take down the removal skirt.

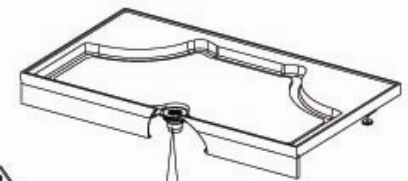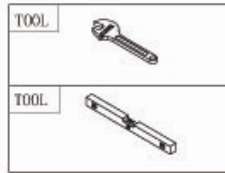



2. Prevent leakage

- actino upper cover
- main body of drainage
- hermetic rubber bedding
- close end fixed nut
- 2" pvc straight cylinder

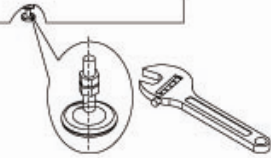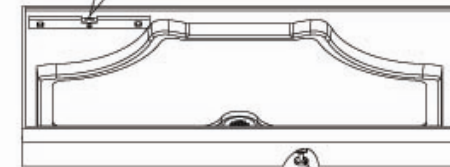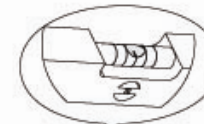




3. Adjust the lever of the base

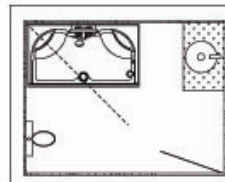

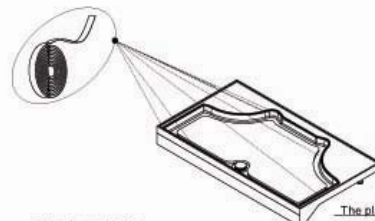

The place which is connected to the middle panel

The place which is connected to the frame

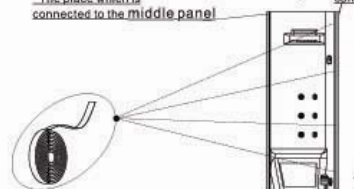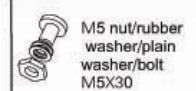
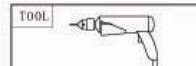


The place which is connected to the base


1. Stick adhesive tape




2. Put to the right hole

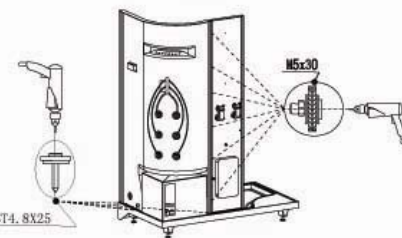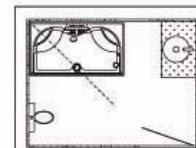

3. Put to the right holes then screw the screws tight

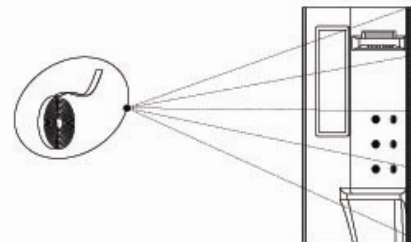


1. Stick adhesive tape

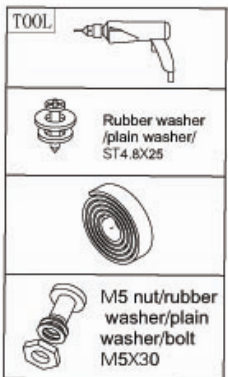




Single-face viscoce tapes

A sight

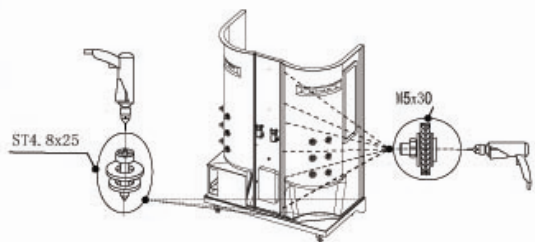


A sight 2 Installation requirement put to the right holes. Screw the screws tightly


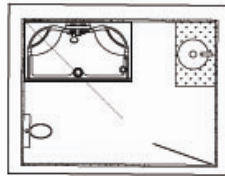


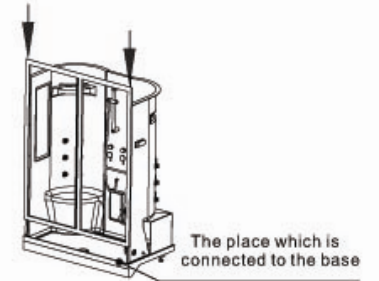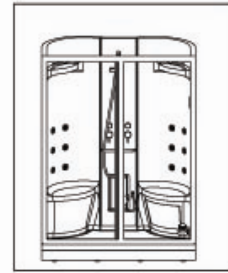



TOOL	
	 ST 4. 2X50
	
	 M4 nut/rubber washer/plain washer/bolt M4X35

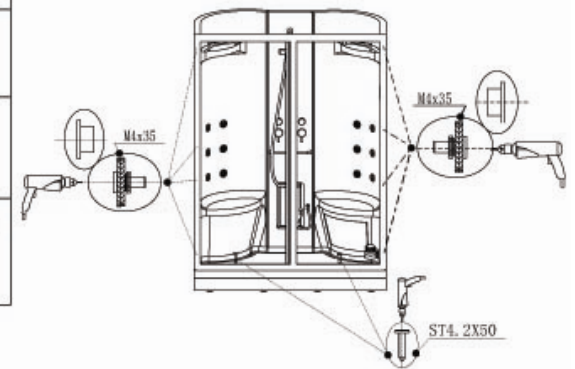



1. Installation requirement put to the right holes.

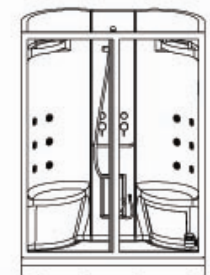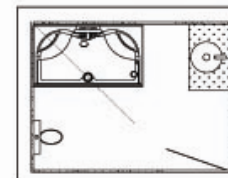

2. Screw the screws tightly.

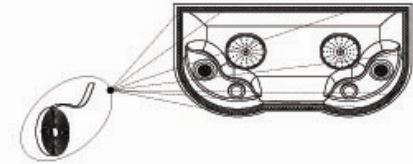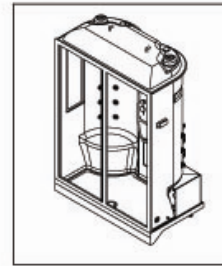

1. Stick adhesive tape

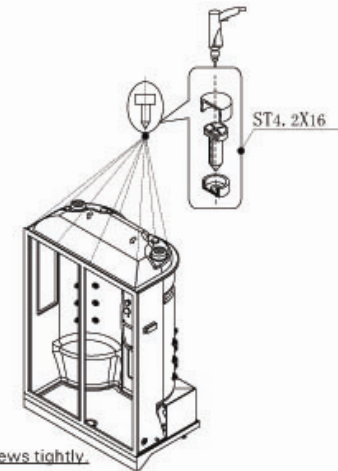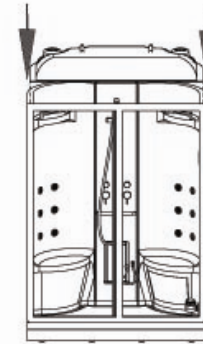

3. Screw the screws tightly.

